


# Installation Quick Guide

## Beacon Switch For 12" Strobe Bar

1. Position Beacon Hardwire Switch for installation.
2. Connect **Power Supply Lead** to your main 12V or 24V system.
3. Splice cable from NightRider™ 12" Strobe Beacon Bar to **Beacon Lead** of switch
  - Red wire to Red wire
  - Yellow wire to Yellow wire
  - Black wire to Black wire
4. Test system

*! Make sure ground is connected to a shiny grounded surface or directly connected to negative terminal of battery.*

*! Solder and use heat shrink for best connection, or use proper electrical connectors.*

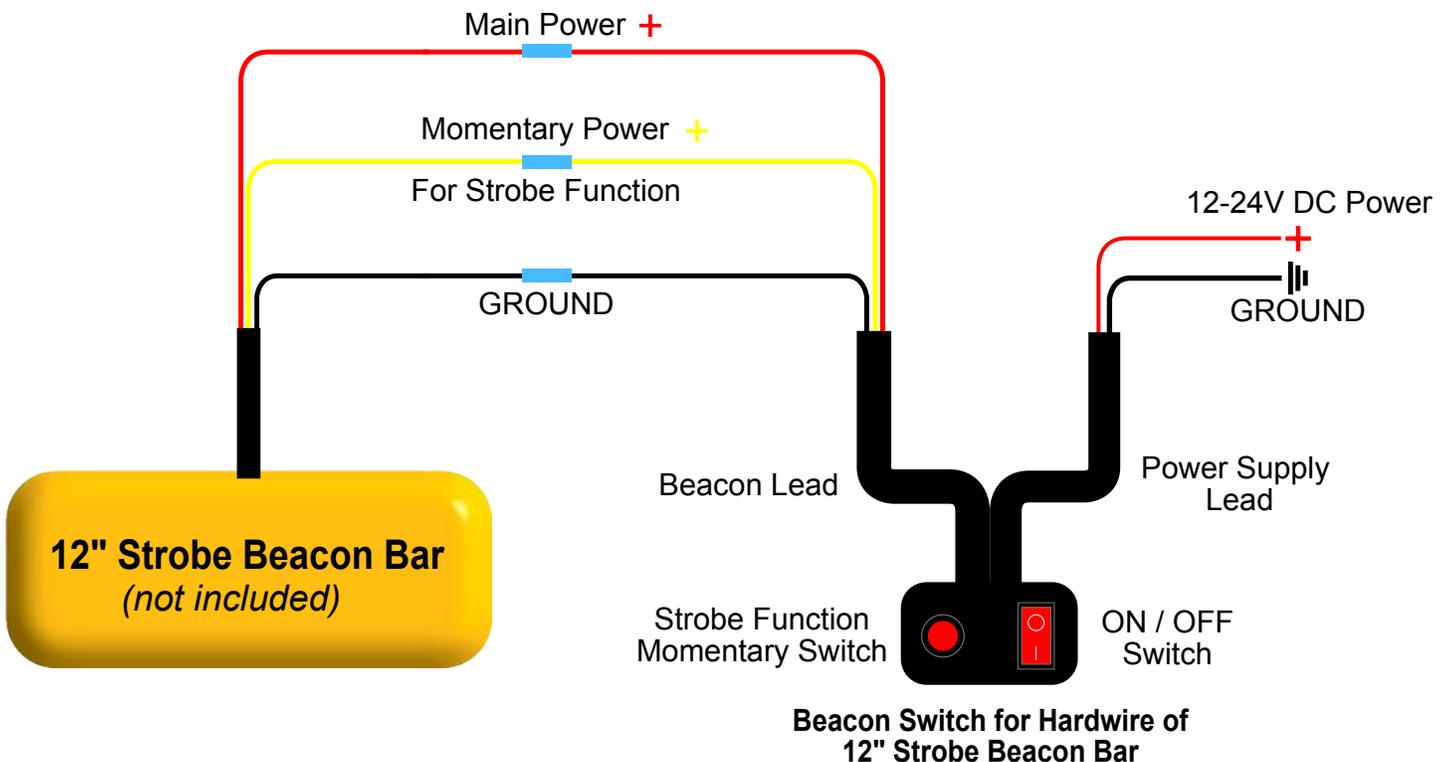

NightRider™ LEDS takes no responsibility for incorrect installation and/or damages related. This guide is for reference purposes only. If unsure about your electrical system contact your dealer or qualified professional automotive/equipment technician. It is the vehicle operator's responsibility to ensure all product installations are properly, safely and legally installed in accordance to regional regulations of use.

**For more information contact your local dealer. Find a dealer: [www.nightriderleds.com](http://www.nightriderleds.com)**