



CONGRATULATIONS AND THANK YOU FOR PURCHASING GENUINE NIGHTRIDER™ LEDS.

NightRider™ LEDS is proud to provide you the **NXS28DM Dodge Toe Hook Mounting Kit**.

This Kit has been custom made for Dodge RAM 2500/3500 years 2010 and Up with only Genuine NightRider™ LEDS NXS28 28inch Extreme Series Double Row LED Light Bar

PLEASE READ ALL INFORMATION IN THIS DOCUMENT BEFORE INSTALLATION AND USE

WARNING!

If at all unsure how to install, please see your certified NightRider™ LEDS Dealer for help. In the case of unresolved questions, please feel free to call us @ 1-800-940-1924 to clarify any concerns related to the function, design, and correct use of our products. NightRider™ LEDS will not be held responsible for incorrect use and or installation of our products. Thank You!

NXS28DM MOUNTING KIT CONTENTS

Check the kit contents against the list below to ensure all parts are available.

KIT CONTENTS:

2 x NightRider™ Toe Hook Mounting Brackets
8 x M12-50 Bolts
8 x M12 Flat Washers

TOOLS NEEDED:

18mm Socket and Drive
18mm Wrench




INSTALLATION INSTRUCTIONS

The following installation procedures are for guidance

All screws, bolts and nuts used in the installation of NightRider LEDS lamps and mounting hardware should be tightened snug and torqued to OEM specifications where required. After the first 30km check for secure fitment.

1. Remove the 4 factory bolts holding each toe hook to frame using an 18mm socket and 18mm wrench on back of nuts.

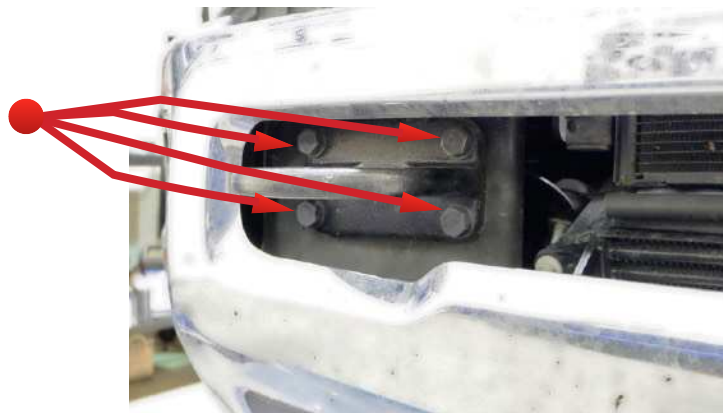



INSTALLATION INSTRUCTIONS

Continued

2. Mount NightRider™ Bracket behind one toe hook.
3. Hand tighten One Set Toe Hook and Bracket back onto truck using included M12-50 bolts and washers.
4. With One Set Toe Hook and Bracket in place, take your NXS28 Light Bar and gently guide it into the remaining toe hook bumper opening, Careful not to scratch.



Passenger Side Toe Hook and NightRider Bracket Shown Here



5. Mount NXS28 Light Bar to Light Bar Bracket Mounting Tab
6. Install remaining set of Toe Hook and Light Bar Bracket onto truck using remaining four M12-50 bolts and washers to hand tight.
7. Mount NXS28 Light Bar to Light Bar Bracket Mounting Tab and insure correct snug fitment.
8. Tighten Toe Hooks securely to truck frame.
9. Wire NXS28 with light bar supplied harness, and ensure proper light aim.



Thank You for choosing Genuine NightRider™ LEDS for your extreme lighting needs!